

USB DSC/DV							
AipTek	PocketDV 3500		F420	D70S		DMC-FX1	
	PocketCam 4000		F610	D100		Z1	
	DC140	FUJIFILM	F700	CoolPix 4100	PANASONIC	NV65	
	DC2300		S20 PRO	CoolPix 4200		Pentax	IstD-L
	DC2310		S620	CoolPix 4300			Digimax V3 USB1.1
	DC2410		GZ-MG50TW	CoolPix 5000			Digimax 202
DC5330	GZ-MG70TW	CoolPix 3100	Digimax V5				
BenQ	DCC40		GZ-MC500US	CoolPix 4300	SamSung	Digimax XT	
	EX-Z40		GZ-MG37TW	CoolPix 4500		Minolta	
CASIO	S600		GZ-MG57TW	CoolPix 5700	Sanyo	AZ1	
	QV-R41		GZ-MG77TW	CoolPix 8700		AZ3	
	300D	JVC	GZ-MG505US	CoolPix SQ		F77	
	A60		NIKON	CoolPix D70		CoolPix D70	F828
	A75	KODAK	7630	C-50Z		F717	
	A80		DX6490	C-2		N1	
	A300		EasyShare DX340 USB2.0	C-2Z		P1	
	EOS 20D		DX6490	C-150Z		P8	
	EOS 350D		LS6-33	C-160Z		P9	
	G5		LS743	C-310Z		P12	
	S50		Kyocera	Finecam S3L		C-360Z	P32
	S60			Finecam S5R		C-460Z	P43
	PowerShotA60		Finecam SL300R	C-730		P52	
	PowerShotS50			KD-310Z		C-730 WZ	P72
	PowerShotA70			KD-400Z		C-740 WZ	P73
	S11S		Konica	KD-410Z		C-750 WZ	P77 USB1.1
	IXUS I			KD-500Z		C-760 WZ	P92
	IXUS 11S		mini DV	C-765 WZ		C-770WZ	P93
IXUS 40	Mustek	DV5500	C-4000Z	P100			
IXUS 400		DIMAGE Xt USB1.1	C-5000Z	T1			
CANON	IXUS 500		DIMAGE A1	C-5000Z	T9		
	DSC-313		DIMAGE A2	C-5050Z	T11		
DXG	DSC-528		DIMAGE 5	C-5060Z	U20		
	DVC-301		DIMAGE 7Hi	C-5060WZ	U30		
EPSON	L-40		DIMAGE F200	C-8080WZ	U50		
	3800		DIMAGE F300	MJU-300	U60		
	FinePix2650	MINOLTA	DIMAGE Xi	MJU-400	V1		
	S5000		DIMAGE X1	MJU-410	W1		
	S7000		DIMAGE X20	U100	W50		
	S9500		DIMAGE Z1	U200	DCR-TRV38E		
	A210		DIMAGE Z2	U300	DCR-PC350		
	A310		3200	Digital E-1	F828		
	A340		4100	X-1	CyberShotUSB1.1		
	Q1		5700	X-2	UMAX		
	FUJIFILM		F410	NIKON	D70	AstraPix 610	

USB PenDrive/MP3	SanDisk Cruzer mini (GL813)
Transcend JetFlash Series	SamSung YP-55
Transcend T. sonic mp3 Series	TCL USB1.1 U-Disk
Apple iPod nano	Regotech 128MB Multi-player
Ali M5634 USB2.0 Pendrive	USB Adapter 32MB
Ali M5633 USB2.0 Pendrive	U-BEST
Ali M5651 USB2.0 Pendrive	紫光 32MB
ADMEGA 64MB	天若 M818A 64MB
Apacer NV400	<b>USB Card Reader</b>
Apacer HANDY 2.0	Transcend TS-RD13 Card Reader
Apacer Audio STENO NV400(USB 2.0)	Transcend TS-RDC Card Reader
CREATIVE MP3 LX100	Ali M5635 Card Reader
Diamond 64MB	CR-T2-UCS USB1.1
Easy disk 32MB	SanDisk SDDR-97 USB2.0
Fujifilm 256MB	SONY MSAC-US30 USB2.0
LG 2.00311E+11 128MB	Cypress ISD 300A1 USB2.0
Leadtek USB disk 2.0	Genesys GL816 Card Reader
MicroFlashDisk MFT032M 32MB	CR-T3-U26
MSI MEGA STICK 1 USB1.1	SMSC USB97C210-NE
New man 128MB	NEODIO ND3260-LA
NAND 128MB	<b>Exteranl USB Mass Starge device</b>
Netac U-Disk USB1.1	Transcend StoreJet25
Inter-Stick (PQI) USB2.0 Pendrive	Transcend PhotoBank
Onlydisk H032-32MB	Ali M5621 USB2.0 to IDE device
Oti002168 160MB	Ali M5642 USB2.0 to IDE device
Oti006828 64MB	Cypress AT2 series USB2.0 to IDE device
PATRIOT(愛爾者) USB1.1 U-Disk	Genesys GL811-E USB2.0 to IDE device
Pen Drive mp3 128MB	ISD 300A1 USB2.0 to IDE device
Phison PS2044 Pendrive	Myson CS8813 USB2.0 to IDE device
Sony USB1.1 Pen drive	NEC0720130GC USB2.0 to IDE device
SAMSUNG 128MB	

Remarks :

- \* If you want to connect USB Portable HDD to StoreJet OTG, please add the power adapter to the USB Portable HDD for sufficient power supply.
- \* If you want to know if your USB Device is compatible with StoreJet OTG, please contact with our tech support engineer. (techsupport@transcend.com.tw)

注意 :

- \* 如果您要連接 StoreJet OTG與硬碟式的USB裝置, 請先將硬碟式的USB裝置外加電源, 以提供足夠驅動硬碟的電量。
- \* 如果您想要進一步確認您的USB裝置與StoreJet OTG的相容性, 請與創見技術支援工程師聯絡。 (techsupport@transcend.com.tw)